



ACCESS2000-MH INSTALLATION GUIDE




1. Remove the mounting bracket from the rear of the ACCESS2000.

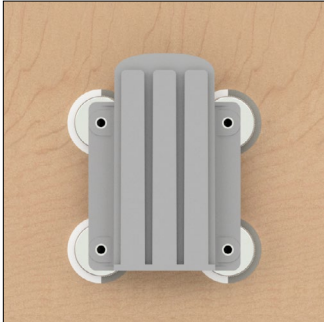

2. Leaving the magnets attached to their shunts, arrange them on a flat, level surface. Place the mou on top of the magnets.

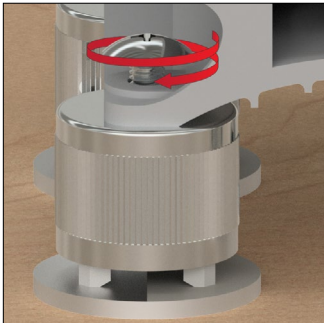

3. Insert the screw through the channel on the mounting bracket into the tapped hole of the magnet and tighten until the screw is hand tight.

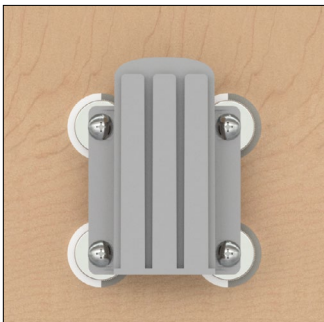

4. Repeat this process for the remaining three screws.



5. Remove the shunts from the magnetic bases. Attach the assembly to a metal surface at the intended location.