


## WIRING INSTRUCTIONS

### MX502 SERIES MINI MAXX Box


1. Strip outer jacket of cable back 1¼ in. and remove all of the shielding.
2. Separate the internal wires from the shield and twist the shield drain wire.
3. Strip red and black insulation back ¼ in.

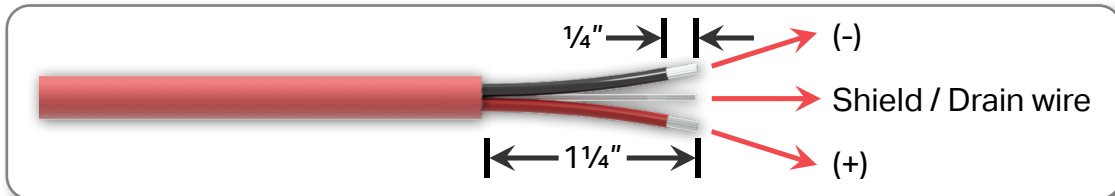

4. While viewing the rear of the panel, locate the appropriate channel. Using a mini flathead screwdriver, loosen the three screws for the channel and insert the wires into the termination block.

#### Orientation is as follows:

- a. Red insulated conductor wire is connected to (+).
- b. Black insulated conductor wire is connected to (-).
- c. Shield drain wire is connected to ground (GND).
- d. Tighten the screw on each wire to hold it in place.

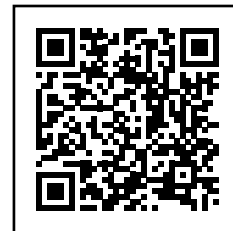

[Visit our website](#) to download the full manual for MX502 enclosures.



# WIRING INSTRUCTIONS

## MX502 SERIES MINI MAXX Box

### Inputs

